


Hitch Clamp - Installation Instructions


gripsport

(1a) Insert Bike Rack Hitch Arm into vehicle hitch receiver and align at desired hole.

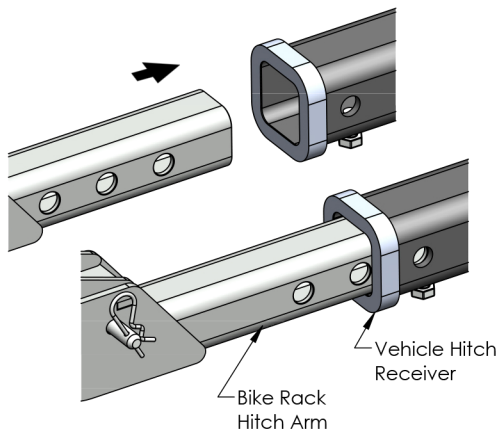


(1b) Tighten Pin if using Hitch Stabiliser or similar, as per supplier instructions. Secure with retaining clip. **Pin MUST pass through a hole in the Bike Rack Hitch Arm!**


(c) Tighten any grub screw that may be fitted to hitch receiver.

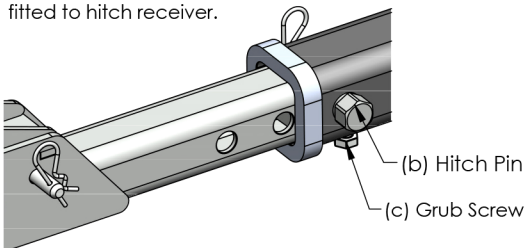

(2) Assemble Hitch Clamp around Bike Rack Hitch Arm as shown below.

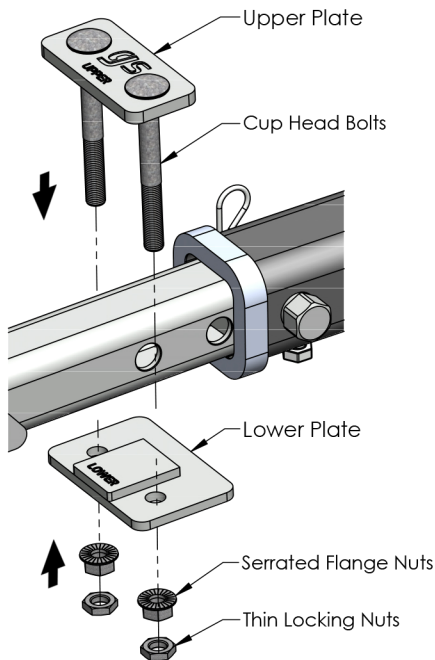

(3a) Position the bottom edge of the Tow Bar Hitch with the Lower Plate as shown below. The Upper Plate only rests on top of the Bike Rack Hitch Arm.

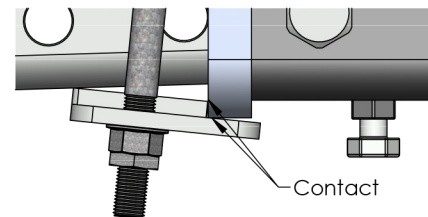

(3b) Tighten the larger Serrated Flange Nuts underneath, pulling the rack downwards. Alternate between the 2 nuts, **until both nuts are very, very tight.**

(3c) Next, screw on the Thin Locking Nuts, and nip up firmly, to avoid larger Serrated Flange Nuts loosening over time with vibration.

